

# User's Manual



V6.1



PROGRAM


## Introduction

This user manual is designed for laser barcode scanner. For detailed usage manual information, please download the complete user manual from our website or obtain it from our distributor.

## Installation

### ▣ Installing a keyboard wedge scanner

1. Make sure that the scanner has the correct cable for your system.
2. Turn off the power of the system. (or PC)
3. Unplug the keyboard from the system.
4. Connect Y cable to the system and keyboard.
5. Turn on the power of the system.
6. If the indicator LED lights up, buzzer sounds, the scanner is ready for reading.

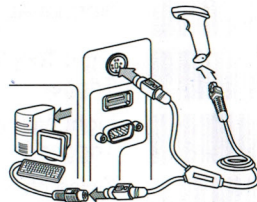

Keyboard interface




END



PROGRAM

### ▣ Installing a RS-232C interface scanner

1. Make sure there is a power supply for the scanner.
2. Connect the cable to the RS-232C port of the device.
3. Make sure the host device have communication program (Xcom, program, Hyperterminal) before transmitting data.

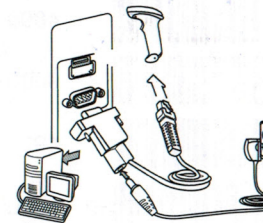

RS-232C interface

### ▣ Installing an USB interface scanner (connect two ends, then windows will detect automatically)

## Setup procedure

The general procedure to program is as following.

1. Scan the command barcode "PROGRAM".
2. Scan one or more parameters.
3. Scan the command barcode "END" to finish procedure.



END

1



PROGRAM

## Default setting



DEFAULT

(\* denotes default setting)

## Interface selection

2



Keyboard Wedge & USB\*

RS-232C

## Keyboard interface

### ▣ Device selection



IBM PC/XT



IBM PC/AT\*



IBM PC/PS2



LAPTOP

3



END